

24-36"
3" Stack heights
60Z + 80Z

Pleated Door Installation Instructions

Please read these instructions before you begin.

Tools Required


Phillips screw driver, miter or hack saw.

Pleated Door Includes:

- 1 Door assembly and ball catch
- 1 Top track
- 1 Screw pack

A. Mounted Top Track

- 1 Measure the distance between the left and right jambs along the top of the door way.
- 2 Cut the top rail to that exact size.
- 3 Mount top track using one #6 x 1" flat head screw in the end or middle of the track (middle preferred, end shown).
- 4 Swing the track out to allow the door assembly to be slid into the track.

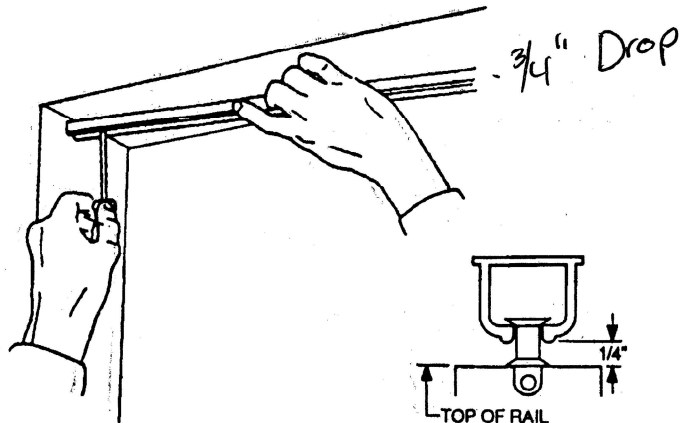

B. Mount Door Assembly

- 1 Slide the door into the track. Be certain to slide it in noting which way you want it to open, left or right.
- 2 Complete securing the top track to the header using #6 x 1" flat head screws. Be certain it is straight and parallel with the edge of the door header.
- 3 Attach the mounting rail of the door assembly to the jamb or wall using #6 x 1 1/2" flat head screws through the premounted eyelet holes. **Note that the top of the stationary rail should be 1/4" below the top track and it should be centered beneath.**



C. Mount Ball Catch

- 1 Remove the ball catch from the door assembly and insert the #6 x 1-1/2" screw into it.
- 2 Drive the screw into the door jamb securing the ball catch. The strap holds the door open.

Note: It is important that the ball catch is lined up evenly with it's hole in the door.

Perfecting Operation



- 1 Silicone spray applied to the inside of the top track will greatly enhance performance.

Shortening the Door

- 1 If you desire to shorten the door, simply cut the side rails along the bottom to the desired length with a hack saw and the fabric of the door with scissors.
- 2 If you have a chop saw you can tape the door tightly with masking tape and cut door to shorten.

Cleaning Instructions

- 1 Use Ivory Soap and a wet soft cotton towel to clean the fabric. The hardware can be cleaned with any nonabrasive cleaner.

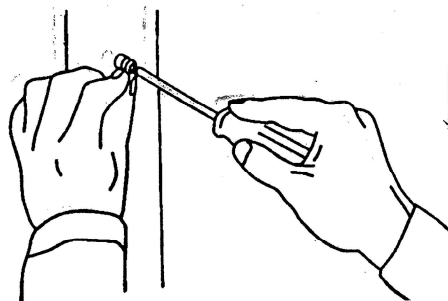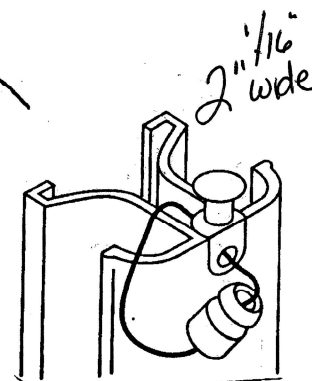

1 5/8" Fabric + Back rail

